

SPADEAD 1M MISSION NUMBER 0901 23 Oct 2007
START 0858:22 CALLSIGN SQUAWK AIRCRAFT
END 0927:09 BANSHEE 1 2611 TOR
BANSHEE 2 2612 TOR

PMR5

MOD/0/29A

BASE LM
REPORT 15(R)Sqn RAF Lossiemouth
SCENARIO A202, R208, P208, A206, SSS
TARGET
THERE IS NO SIGNIFICANCE IN THE TIME TAKEN FOR AN A/C
TO BE ACQUIRED AFTER THE ENGAGE COMMAND HAS BEEN GIVEN.

FOR COMMCEN USE - TOR: TOT:
EDITED BY: BP AT 1000Z
MISSION REPORT
AIRCRAFT 2611

TIME THREAT SITE ACTION

** DISREGARD A202 HEIGHT DATA. **

0858:34 SSR	016.33/039.63/12726/125
0858:42 SSR	016.90/039.06/13024/128
0858:49 SSR	017.50/038.50/13225/130
0858:56 SSR	018.02/037.93/13425/132
0859:03 SSR	018.60/037.41/00000/000
0859:11 SSR	019.27/036.74/13825/136
0859:18 SSR	019.91/036.17/14025/138
0859:25 SSR	020.58/035.57/14225/140
0859:39 SSR	022.06/034.37/14625/144
0859:47 SSR	022.86/033.78/14826/146
0859:53 RC	START RUN 1
0859:54 SSR	023.73/033.20/15026/148
0900:01 SSR	024.63/032.61/15226/150
0900:08 SSR	025.56/032.01/15426/152
0900:16 SSR	026.51/031.43/15626/154
0900:23 SSR	027.51/030.85/15725/155
0900:30 SSR	028.60/030.26/15725/155
0900:37 SSR	029.77/029.66/15725/155
0900:45 SSR	030.99/029.07/15725/155
0900:52 SSR	032.29/028.50/15725/155
0900:59 SSR	033.65/027.93/15725/155
0901:06 SSR	035.09/027.36/15725/155
0901:14 SSR	036.65/026.80/15725/155
0901:21 SSR	038.23/026.27/15626/154
0901:28 SSR	040.00/025.76/15626/154
0901:35 SSR	041.82/025.25/15626/154
0901:43 SSR	043.71/024.78/15826/156
0901:50 SSR	045.68/024.33/15725/155
0901:57 SSR	047.73/023.88/15725/155
0902:04 SSR	049.69/023.33/15826/156
0902:12 SSR	051.47/022.69/15826/156
0902:19 SSR	053.13/021.95/15826/156
0902:26 SSR	054.58/021.13/15826/156
0902:33 SSR	055.88/020.27/15725/155
0902:41 SSR	057.07/019.34/15626/154
0902:48 SSR	058.08/018.41/15626/154
0902:55 SSR	059.19/017.47/15524/153
0903:02 SSR	061.36/016.68/15524/153
0903:10 SSR	064.46/016.18/15426/152
0903:17 SSR	068.04/016.02/15426/152
0903:24 SSR	071.71/016.09/15426/152
0903:31 SSR	075.32/016.22/15524/153
0903:39 SSR	078.90/016.39/15626/154
0903:46 SSR	082.41/016.33/15626/154
0903:53 SSR	085.67/015.97/15524/153
0904:01 SSR	088.32/015.36/15524/153
0904:06 A202	BH1 ENGAGE
0904:08 SSR	090.27/014.56/15426/152
0904:15 SSR	091.31/013.65/15426/152
0904:22 SSR	091.60/012.75/15426/152
0904:22 A202-2	BH1 MANUAL TRACK 092.08/013.28/-0328
0904:25 A202-2	BH1 AUTO-TRACK 090.83/007.73/-0328
0904:29 SSR	091.57/011.80/15524/153
0904:37 SSR	091.49/010.87/15524/153
0904:44 SSR	091.48/009.90/15426/152
0904:51 SSR	091.49/008.96/15426/152
0904:58 SSR	091.58/008.00/15426/152
0905:06 SSR	091.61/007.02/15426/152
0905:13 SSR	091.79/006.04/15426/152
0905:20 SSR	091.85/005.07/15426/152
0905:27 SSR	091.96/004.10/15426/152
0905:35 SSR	092.28/003.10/15426/152
0905:42 SSR	092.77/002.11/15426/152
0905:49 SSR	095.35/001.13/15426/152
0906:01 A202	BH1 BREAKLOCK 138.45/002.05/04576
0906:02 A202	BH1 ELEVATION 138.45/002.05/04576
0906:04 SSR	224.06/000.98/15524/153
0906:19 SSR	203.20/002.59/00000/000
0906:34 SSR	198.90/003.76/10826/106

0906:41 SSR 190.94/004.26/11525/113
0906:46 A202-2 BH1 MANUAL TRACK 198.93/004.45/-0328
0906:48 SSR 184.51/004.76/12125/119
0906:48 A202-2 BH1 AUTO-TRACK 198.99/004.86/05229
0906:55 SSR 179.35/005.30/12624/124
0907:02 SSR 175.08/005.88/12926/127
0907:09 SSR 171.44/006.49/13326/131
0907:17 SSR 168.39/007.11/13625/134
0907:24 SSR 165.81/007.73/13825/136
0907:31 SSR 163.63/008.38/14127/139
0907:38 SSR 161.76/009.03/14327/141
0907:45 SSR 160.06/009.70/14425/142
0907:47 A202 BH1 DISENGAGE
0907:53 SSR 158.54/010.36/14727/145
0907:54 RC END RUN 1
0908:00 SSR 156.67/010.97/15026/148
0908:07 SSR 154.30/011.53/15324/151
0908:14 SSR 151.68/012.00/15524/153
0908:21 SSR 148.58/012.29/15626/154
0908:29 SSR 145.10/012.36/15626/154
0908:36 SSR 141.73/012.23/15524/153
0908:43 SSR 138.22/012.08/15524/153
0908:50 SSR 134.56/012.00/15524/153
0908:57 SSR 130.81/011.95/15524/153
0909:04 SSR 127.08/011.97/15626/154
0909:11 SSR 123.40/012.00/15626/154
0909:19 SSR 119.71/012.07/15626/154
0909:26 SSR 116.05/012.21/15626/154
0909:33 SSR 112.71/012.53/15524/153
0909:40 SSR 109.90/012.99/15426/152
0909:47 SSR 107.54/013.54/15426/152
0909:54 SSR 105.44/014.12/15524/153
0910:02 SSR 103.95/014.78/15524/153
0910:09 SSR 102.89/015.48/15426/152
0910:16 SSR 101.83/016.18/15426/152
0910:23 SSR 101.32/016.89/15725/155
0910:30 SSR 100.88/017.62/15826/156
0910:38 SSR 100.02/018.27/15925/157
0910:45 SSR 098.55/018.77/15725/155
0910:52 SSR 096.58/019.02/15426/152
0910:59 SSR 094.53/019.07/15426/152
0911:06 SSR 092.49/019.05/15426/152
0911:13 SSR 090.36/018.93/15524/153
0911:21 SSR 088.22/018.78/15524/153
0911:28 SSR 086.00/018.57/15524/153
0911:35 SSR 083.78/018.26/15524/153
0911:42 SSR 081.67/017.89/15426/152
0911:49 SSR 079.85/017.35/15426/152
0911:56 SSR 078.55/016.67/15324/151
0912:02 RC START RUN 2
0912:04 SSR 077.85/015.94/15324/151
0912:07 A202 BH1 ENGAGE
0912:11 SSR 077.72/015.14/15324/151
0912:18 A206 BK ENGAGE
0912:18 SSR 077.74/014.36/15324/151
0912:25 SSR 077.73/013.54/15324/151
0912:32 SSR 077.79/012.70/15324/151
0912:40 SSR 077.72/011.85/15324/151
0912:47 SSR 077.72/010.97/15324/151
0912:54 SSR 077.69/010.08/15324/151
0913:01 SSR 077.66/009.18/15324/151
0913:08 SSR 077.65/008.28/15324/151
0913:16 SSR 077.51/007.36/15324/151
0913:21 A202-2 BH1 MANUAL TRACK 257.96/009.64/-0328
0913:23 SSR 077.28/006.45/15324/151
0913:30 SSR 077.06/005.51/15324/151
0913:32 A202-2 BH1 AUTO-TRACK 080.77/005.77/-0328
0913:37 SSR 076.81/004.58/15324/151
0913:45 SSR 076.38/003.62/15324/151
0913:59 SSR 094.16/002.14/15626/154
0914:07 SSR 113.80/002.69/00000/000
0914:10 R208 BH5 ENGAGE
0914:14 SSR 129.07/002.91/00000/000
0914:29 SSR 142.37/003.87/12326/121
0914:31 P208 BC ENGAGE
0914:36 SSR 145.55/004.52/12824/126
0914:39 P208 BC NOT FOUND 000.00/005.64/01417
0914:43 SSR 147.86/005.20/13225/130
0914:44 P208 BC DISENGAGE
0914:46 R208 BH5 NOT FOUND
0914:47 R208 BH5 SCORE J
0914:48 R208 BH5 DISENGAGE
0914:51 SSR 149.37/005.87/13727/135
0914:58 SSR 150.11/006.57/14025/138
0915:05 SSR 150.37/007.28/14025/138
0915:12 SSR 149.07/007.98/14225/140
0915:19 SSR 146.54/008.62/14225/140

PMR5

MOD/0/29A

0915:20 A206-2 BK auto-track 150.68/009.85/15193
0915:27 SSR 143.18/009.15/14225/140
0915:32 A206 BK BREAKLOCK 154.06/010.47/20587
0915:33 A206 BK EVASIVE MANOEUVRES 154.06/010 47/20587
0915:34 SSR 139.51/009.61/14327/141
0915:38 A202 BH1 SCORE J
0915:39 A202 BH1 DISENGAGE
0915:41 SSR 135.45/009.95/14327/141
0915:48 SSR 131.12/010.18/14327/141
0915:53 A206-2 BK auto-track 134.48/011.65/14842
0915:55 SSR 126.91/010.38/14327/141
0915:56 A206-3 BK launch 131.06/011.70/15498
0916:02 SSR 122.69/010.58/14327/141
0916:05 A206 BK BREAKLOCK 123.64/014.38/21217
0916:05 A206 BK EVASIVE MANOEUVRES 122.74/015 32/22870
0916:09 SSR 118.71/010.80/14425/142
0916:16 SSR 114.91/011.07/14327/141
0916:19 A206-2 BK auto-track 120.38/012.34/15059
0916:24 SSR 111.28/011.36/14327/141
0916:27 A206-3 BK launch 116.02/012.63/15390
0916:31 SSR 107.83/011.70/14327/141
0916:38 SSR 104.61/012.05/14327/141
0916:45 SSR 101.62/012.44/14327/141
0916:52 SSR 098.80/012.84/14327/141
0916:59 SSR 096.14/013.26/14327/141
0917:06 SSR 093.64/013.70/14327/141
0917:14 SSR 091.34/014.14/14225/140
0917:21 SSR 089.11/014.62/14225/140
0917:28 SSR 087.05/015.09/14225/140
0917:35 SSR 085.18/015.58/14225/140
0917:42 SSR 083.35/016.08/14225/140
0917:49 SSR 081.64/016.59/14225/140
0917:57 SSR 079.99/017.09/14225/140
0918:04 SSR 078.44/017.62/14127/139
0918:11 SSR 076.92/018.13/14225/140
0918:18 SSR 075.32/018.58/14225/140
0918:25 SSR 073.57/018.99/14225/140
0918:33 SSR 071.79/019.34/14225/140
0918:40 SSR 069.86/019.60/14225/140
0918:47 SSR 067.86/019.78/14225/140
0918:54 SSR 065.83/019.70/14225/140
0919:01 SSR 064.12/019.30/14225/140
0919:08 SSR 063.22/018.72/14127/139
0919:16 SSR 063.05/018.03/14127/139
0919:22 A202 BH1 ENGAGE
0919:23 SSR 063.13/017.34/14127/139
0919:26 A206 BK BREAKLOCK 069.22/017.99/15269
0919:27 A206 BK EVASIVE MANOEUVRES 069.22/017 99/15269
0919:30 SSR 063.14/016.62/14127/139
0919:37 SSR 063.12/015.87/14127/139
0919:45 SSR 063.09/015.10/14127/139
0919:52 SSR 063.06/014.29/14127/139
0919:53 A202-2 BH1 MANUAL TRACK 065.30/006.50/98425
0919:59 SSR 063.14/013.50/14127/139
0920:01 A202-2 BH1 AUTO-TRACK 062.74/004.17/80524
0920:06 SSR 064.87/012.88/14225/140
0920:21 SSR 069.70/012.31/00000/000
0920:25 R208 BH5 ENGAGE
0920:28 SSR 072.94/011.91/09625/094
0920:35 SSR 076.06/011.74/08927/087
0920:42 SSR 078.47/011.39/05725/055
0920:48 R208-1 BH5 ACQUIRED 081.14/010.52/03382
0920:50 SSR 082.28/011.03/04327/041
0920:57 SSR 086.68/010.79/03425/032
0921:04 SSR 091.09/010.53/02726/025
0921:06 P208 BC ENGAGE
0921:09 R208-2 BH5 AUTO-TRACK 093.14/008.33/02309
0921:12 SSR 095.40/010.22/00000/000
0921:19 SSR 099.11/009.74/01925/017
0921:26 SSR 101.71/009.13/01827/016
0921:33 SSR 103.04/008.41/01525/013
0921:41 SSR 103.35/007.64/01325/011
0921:48 SSR 103.40/006.85/01325/011
0921:55 SSR 103.50/006.04/01227/010
0922:00 R208-3 BH5 LAUNCH 107.19/004.12/01026
0922:02 SSR 103.49/005.23/01227/010
0922:09 SSR 103.55/004.40/01125/009
0922:17 SSR 103.68/003.52/01026/008
0922:21 R208-3 BH5 LAUNCH 108.07/001.57/00951
0922:30 P208 BC NOT FOUND
0922:31 SSR 082.94/003.17/01827/016
0922:31 P208 BC DISENGAGE
0922:38 SSR 078.86/003.83/01627/014
0922:45 SSR 079.35/004.60/01525/013
0922:46 R208 BH5 BREAKLOCK 075.59/001.19/01286
0922:52 SSR 080.07/005.39/01525/013
0922:56 R208 BH5 EVASIVE MANOEUVRES 069.78/001 20/01309

PMR5

MOD/0/29A

0922:59 SSR 080.97/006.18/01725/015
0923:01 R208 BH5 DISENGAGE
0923:07 A202 BH1 DISENGAGE
0923:07 SSR 082.18/006.95/01827/016
0923:14 SSR 085.38/007.62/01827/016
0923:17 RC END RUN 2
0923:21 SSR 090.01/008.05/01627/014
0923:28 SSR 095.29/008.37/01627/014
0923:34 RC START RUN 3
0923:36 SSR 100.71/008.61/01427/012
0923:39 P208 BC ENGAGE
0923:43 SSR 106.20/008.81/01325/011
0923:46 A202 BH1 ENGAGE
0923:50 SSR 111.49/009.06/01125/009
0923:58 SSR 116.50/009.39/01125/009
0924:05 SSR 121.05/009.75/01026/008
0924:10 A202-2 BH1 MANUAL TRACK 120.15/001.77/56289
0924:12 SSR 125.39/010.17/01026/008
0924:19 SSR 129.84/010.23/01125/009
0924:34 SSR 134.02/008.94/01125/009
0924:41 SSR 133.80/008.09/01026/008
0924:44 R208 BH5 ENGAGE
0924:48 SSR 133.32/007.20/00925/007
0924:56 SSR 133.00/006.30/00925/007
0924:59 A202 BH1 BREAKLOCK 132.80/002.39/18786
0925:00 A202 BH1 TERRAIN MASKING 132.81/001.74/-0328
0925:03 SSR 132.75/005.37/00925/007
0925:10 SSR 132.25/004.44/00925/007
0925:15 A202-2 BH1 OPTICAL TRACK 128.61/004.02/06407
0925:16 A202-2 BH1 AUTO-TRACK 128.61/004.02/06407
0925:24 SSR 116.37/004.32/01627/014
0925:26 R208-1 BH5 ACQUIRED 121.64/005.87/01916
0925:31 SSR 115.88/005.09/01325/011
0925:35 R208-2 BH5 AUTO-TRACK 119.73/002.65/01105
0925:35 R208-3 BH5 LAUNCH 119.73/002.65/01105
0925:38 SSR 115.52/005.90/01125/009
0925:42 A202 BH1 BREAKLOCK 113.11/006.41/19950
0925:42 A202 BH1 TERRAIN MASKING 113.11/006.41/19950
0925:46 SSR 115.62/006.75/01125/009
0925:46 R208 BH5 BREAKLOCK 117.51/003.97/00912
0925:48 R208 BH5 TERRAIN MASKING 118.50/004.09/00912
0925:50 A202-2 BH1 MANUAL TRACK 113.11/006.00/25905
0925:53 SSR 116.17/007.63/01125/009
0926:00 SSR 120.06/008.29/01325/011
0926:05 P208 BC NOT FOUND
0926:07 P208 BC DISENGAGE
0926:15 SSR 130.45/008.49/02027/018
0926:22 SSR 134.88/008.02/02424/022
0926:29 SSR 137.69/007.34/02624/024
0926:36 SSR 138.42/006.50/02726/025
0926:44 SSR 136.35/005.73/03126/029
0926:48 A202 BH1 DISENGAGE
0926:51 SSR 131.25/005.03/03625/034
0926:52 R208 BH5 DISENGAGE
0926:54 R208-1 BH5 ACQUIRED 144.32/003.85/01427
0926:58 SSR 124.25/004.46/04327/041
0927:00 R208 BH5 DISENGAGE
0927:01 RC END RUN 3
0927:05 SSR 115.33/003.96/05026/048

PMR5

MOD/0/29A

AIRCRAFT 2612

TIME THREAT SITE ACTION

** DISREGARD A202 HEIGHT DATA. **

0858:34 SSR 016.34/039.82/12726/125
0858:42 SSR 016.89/039.25/13024/128
0858:49 SSR 017.44/038.67/13326/131
0858:56 SSR 018.02/038.13/13526/133
0859:11 SSR 019.23/037.02/13927/137
0859:18 SSR 019.86/036.47/14127/139
0859:25 SSR 020.50/035.90/14327/141
0859:32 SSR 021.14/035.42/00000/000
0859:39 SSR 021.96/034.77/14727/145
0859:47 SSR 022.64/034.18/14924/147
0859:54 SSR 023.48/033.60/15124/149
0900:01 SSR 024.31/033.02/15226/150
0900:08 SSR 025.14/032.45/15426/152
0900:16 SSR 026.02/031.85/15626/154
0900:23 SSR 027.03/031.27/15725/155
0900:30 SSR 028.05/030.70/15826/156
0900:37 SSR 029.13/030.10/15826/156
0900:45 SSR 030.31/029.52/15826/156
0900:52 SSR 031.55/028.94/15725/155
0900:59 SSR 032.85/028.35/15725/155
0901:06 SSR 034.30/027.76/15725/155
0901:14 SSR 035.94/027.16/15725/155
0901:21 SSR 037.63/026.58/15725/155
0901:28 SSR 039.46/026.06/15725/155
0901:35 SSR 041.41/025.54/15725/155

0901:43 SSR 043.37/025.04/15725/155
 0901:50 SSR 045.03/024.39/15925/157
 0901:57 SSR 045.81/023.50/15826/156
 0902:04 SSR 046.32/022.57/15826/156
 0902:11 SSR 046.76/021.64/15826/156
 0902:15 RC START RUN 1
 0902:19 SSR 046.77/020.66/15826/156
 0902:26 A202 BH1 ENGAGE
 0902:26 SSR 046.52/019.70/15725/155
 0902:33 SSR 046.11/018.72/15725/155
 0902:40 SSR 045.53/017.77/15725/155
 0902:46 A202-2 BH1 MANUAL TRACK 042.79/008.68/-0323
 0902:48 SSR 045.49/016.79/15725/155
 0902:50 A202-2 BH1 AUTO-TRACK 041.56/016.66/22539
 0902:55 SSR 047.08/015.97/15725/155
 0903:02 SSR 050.08/015.55/15725/155
 0903:04 A202 BH1 DISENGAGE
 0903:09 SSR 053.58/015.44/15725/155
 0903:17 SSR 057.04/015.45/15725/155
 0903:24 SSR 060.54/015.50/15725/155
 0903:31 SSR 064.09/015.62/15725/155
 0903:38 SSR 067.53/015.78/15725/155
 0903:46 SSR 070.95/016.02/15725/155
 0903:53 SSR 074.32/016.23/15826/156
 0904:00 SSR 077.55/016.47/15826/156
 0904:02 RC END RUN 1
 0904:08 SSR 080.82/016.70/15925/157
 0904:15 SSR 084.08/016.73/15925/157
 0904:22 SSR 087.28/016.52/15925/157
 0904:29 SSR 090.24/016.13/15925/157
 0904:37 SSR 092.29/015.42/16026/158
 0904:44 SSR 093.56/014.58/15925/157
 0904:51 SSR 094.44/013.71/15826/156
 0904:58 SSR 093.11/012.93/15324/151
 0905:13 SSR 086.34/012.07/00000/000
 0905:20 SSR 081.38/011.57/08825/086
 0905:27 SSR 076.42/011.49/08927/087
 0905:41 SSR 070.66/012.87/08927/087
 0905:48 SSR 068.73/013.71/08825/086
 0905:56 SSR 067.41/014.57/08927/087
 0906:03 SSR 066.40/015.44/09025/088
 0906:10 SSR 065.59/016.33/09225/090
 0906:17 SSR 065.01/017.19/10324/101
 0906:24 SSR 064.63/017.95/12027/118
 0906:32 SSR 064.33/018.67/13625/134
 0906:39 SSR 064.08/019.31/15026/148
 0906:46 SSR 063.88/019.93/15925/157
 0906:53 SSR 063.61/020.58/16125/159
 0907:00 SSR 063.48/021.24/16026/158
 0907:08 SSR 063.39/021.93/15925/157
 0907:15 SSR 063.23/022.66/15925/157
 0907:22 SSR 063.40/023.39/15925/157
 0907:29 SSR 064.06/024.07/15925/157
 0907:37 SSR 065.22/024.63/15925/157
 0907:44 SSR 066.89/024.96/15925/157
 0907:51 SSR 068.53/025.04/15826/156
 0907:58 SSR 070.20/024.84/15826/156
 0908:06 SSR 071.62/024.43/15826/156
 0908:08 RC START RUN 2
 0908:13 SSR 072.73/023.83/15826/156
 0908:20 SSR 073.38/023.10/15725/155
 0908:27 SSR 073.74/022.32/15725/155
 0908:29 A202 BH1 ENGAGE
 0908:34 SSR 074.07/021.54/15826/156
 0908:42 SSR 074.44/020.73/15826/156
 0908:49 SSR 074.71/019.93/15925/157
 0908:56 SSR 075.03/019.09/15925/157
 0908:57 A202 BH1 ECM 079.39/018.31/37004
 0909:01 A202 BH1 SCORE B
 0909:03 SSR 075.29/018.22/15925/157
 0909:05 A202-2 BH1 AUTO-TRACK 076.95/009.94/-0328
 0909:11 SSR 075.56/017.35/15925/157
 0909:15 A202 BH1 ECM 078.10/015.40/50232
 0909:18 SSR 075.84/016.47/15826/156
 0909:19 A202 BH1 SCORE D
 0909:25 SSR 076.06/015.54/15826/156
 0909:28 A202 BH1 ECM 076.82/008.82/00000
 0909:30 A202 BH1 SCORE D
 0909:32 SSR 076.49/014.65/15925/157
 0909:38 A206 BK ENGAGE
 0909:39 SSR 077.55/013.79/16227/160
 0909:47 SSR 079.03/012.92/16227/160
 0909:54 SSR 080.83/012.09/16227/160
 0910:01 SSR 082.91/011.21/16227/160
 0910:06 A202 BH1 ECM 349.48/008.07/49826
 0910:08 SSR 085.90/010.49/16525/163
 0910:08 A202 BH1 SCORE D

0910:16 SSR 090.29/010.35/15826/156
 0910:23 SSR 093.35/010.85/00000/000
 0910:30 SSR 097.16/011.35/00000/000
 0910:38 SSR 101.64/011.69/00000/000
 0910:52 SSR 108.72/010.55/05925/057
 0910:59 SSR 110.65/009.59/00000/000
 0911:00 R208 BH5 ENGAGE
 0911:07 SSR 110.90/008.53/03326/031
 0911:14 SSR 110.45/007.52/02824/026
 0911:19 R208-1 BH5 ACQUIRED 090.31/009.77/01545
 0911:21 SSR 111.48/006.57/02424/022
 0911:27 R208-2 BH5 AUTO-TRACK 115.05/004.76/01696
 0911:28 P100 R81 ENGAGE
 0911:34 R208-3 BH5 LAUNCH 120.83/003.80/01181
 0911:36 SSR 123.70/005.02/01125/009
 0911:41 R208 BH5 BREAKLOCK 125.83/003.15/00925
 0911:41 A202 BH1 BREAKLOCK 111.71/002.51/29104
 0911:42 R208 BH5 TERRAIN MASKING 125.86/003.19/00925
 0911:42 A202 BH1 TERRAIN MASKING 111.71/002.51/29104
 0911:43 SSR 128.23/004.09/00925/007
 0911:44 A202-2 BH1 MANUAL TRACK 111.71/004.21/16952
 0911:50 SSR 134.87/003.17/00826/006
 0911:57 SSR 146.14/002.32/00826/006
 0912:05 SSR 167.95/001.55/00826/006
 0912:07 A202 BH1 DISENGAGE
 0912:08 P100-2 R81 OPTICAL TRACK 116.09/001.23/00826
 0912:09 R208-1 BH5 ACQUIRED 168.20/000.28/00928
 0912:10 P100-3 R81 LAUNCH 117.06/000.95/00826 SSS LAUNCH
 0912:12 SSR 209.99/001.18/00925/007
 0912:17 A206 BK NOT FOUND
 0912:18 A206 BK DISENGAGE
 0912:19 SSR 259.81/001.11/01125/009
 0912:30 SSR 302.28/002.09/01325/011
 0912:37 R208 BH5 DISENGAGE
 0912:37 SSR 307.66/003.01/01525/013
 0912:44 SSR 311.25/003.97/01627/014
 0912:48 P100 R81 DISENGAGE
 0912:52 SSR 317.39/004.84/01827/016
 0912:59 P208 BL ENGAGE
 0913:07 SSR 336.06/005.68/01925/017
 0913:14 SSR 346.17/005.67/02125/019
 0913:22 SSR 356.32/005.71/02227/020
 0913:29 SSR 006.07/005.93/02227/020
 0913:36 SSR 014.94/006.29/02326/021
 0913:44 SSR 022.81/006.77/02424/022
 0913:51 SSR 029.43/007.37/02624/024
 0913:58 SSR 035.13/008.04/02726/025
 0914:05 SSR 039.89/008.75/02726/025
 0914:13 SSR 043.89/009.54/02726/025
 0914:20 SSR 047.37/010.37/02726/025
 0914:27 SSR 050.29/011.22/02726/025
 0914:35 SSR 052.81/012.07/02726/025
 0914:42 SSR 055.01/012.94/02926/027
 0914:49 SSR 056.99/013.79/03126/029
 0914:52 P208 BL NOT FOUND
 0914:53 P208 BL DISENGAGE
 0914:56 SSR 058.64/014.67/03326/031
 0915:03 SSR 060.22/015.54/03526/033
 0915:11 SSR 062.59/016.21/03526/033
 0915:15 RC END RUN 2
 0915:18 SSR 065.85/016.46/03326/031
 0915:25 SSR 069.16/016.38/03126/029
 0915:32 SSR 072.32/015.92/03024/028
 0915:34 RC START RUN 3
 0915:39 A202 BH1 ENGAGE
 0915:40 SSR 074.39/015.15/02726/025
 0915:47 SSR 076.06/014.25/02424/022
 0915:54 SSR 078.44/013.39/02227/020
 0915:56 P208 BC ENGAGE
 0916:01 SSR 081.70/012.66/01925/017
 0916:09 SSR 085.45/011.98/01627/014
 0916:16 SSR 089.61/011.35/01325/011
 0916:18 A202-2 BH1 MANUAL TRACK 086.39/005.05/-0328
 0916:19 R208 BH5 ENGAGE
 0916:23 SSR 093.87/010.74/01125/009
 0916:31 SSR 098.61/010.17/01125/009
 0916:38 SSR 104.00/009.66/01026/008
 0916:45 SSR 109.87/009.25/01026/008
 0916:52 SSR 116.18/008.90/01026/008
 0916:52 A202 BH1 ECM 099.05/004.57/00000
 0916:56 A202 BH1 SCORE D
 0917:00 SSR 122.97/008.65/01125/009
 0917:07 SSR 129.42/008.26/01227/010
 0917:14 SSR 132.34/007.38/01325/011
 0917:20 A202 BH1 ECM 099.05/003.84/58763
 0917:23 A202 BH1 SCORE D
 0917:29 SSR 132.01/005.34/01026/008

0917:36 SSR 131.77/004.31/01026/008
0917:43 SSR 131.62/003.26/00925/007
0917:48 A202 BH1 BREAKLOCK 118.74/008.04/26847
0917:49 A202 BH1 TERRAIN MASKING 117.33/005.74/45314
0917:50 SSR 131.41/002.21/00925/007
0917:55 A202 BH1 ECM 117.34/007.65/37431
0917:57 SSR 130.91/001.14/00925/007
0918:02 A202 BH1 SCORE A
0918:03 R208 BH5 ECM 137.26/000.36/00958
0918:05 SSR 122.63/000.10/01125/009
0918:06 R208-1 BH5 ACQUIRED 137.44/000.15/00961
0918:06 R208-2 BH5 OPTICAL TRACK 139.40/000.13/00971
0918:07 R208-3 BH5 LAUNCH 139.40/000.13/00971 INSIDE MIN MISSILE RANGE
0918:11 SSR 324.35/000.90/01227/010
0918:12 R208 BH5 LOST CONTACT 150.00/000.09/01079
0918:12 P208 BL ENGAGE
0918:13 R208 BH5 OVERHEAD 150.03/000.12/01125
0918:17 SSR 327.94/001.80/01427/012
0918:24 SSR 327.37/002.74/01725/015
0918:30 P208 BC NOT FOUND 119.36/003.54/04376
0918:31 SSR 331.37/003.69/00000/000
0918:31 P208 BC DISENGAGE
0918:38 SSR 334.71/004.58/00000/000
0918:45 SSR 337.19/005.41/00000/000
0918:53 SSR 338.78/006.11/08024/078
0918:59 A202 BH1 ECM 332.49/006.35/03956
0919:00 SSR 340.17/006.87/09025/088
0919:04 A202 BH1 SCORE A
0919:07 SSR 341.18/007.61/09924/097
0919:10 A202-2 BH1 AUTO-TRACK 335.40/003.99/42795
0919:13 R208 BH5 ECM 343.57/005.74/03569
0919:14 SSR 342.23/008.54/00000/000
0919:14 R208 BH5 SCORE A
0919:15 P208 BL NOT FOUND
0919:16 P208 BL DISENGAGE
0919:17 A202 BH1 BREAKLOCK 335.54/007.79/22490
0919:18 A202 BH1 ECM 336.83/005.17/00000
0919:19 A202 BH1 SCORE A
0919:21 SSR 342.62/009.09/11525/113
0919:22 A202 BH1 DISENGAGE
0919:27 R208 BH5 DISENGAGE
0919:29 SSR 343.13/009.81/12027/118
0919:36 SSR 343.60/010.54/12526/123
0919:39 RC END RUN 3
0919:43 SSR 344.11/011.27/12824/126
0919:50 SSR 345.41/011.98/13126/129
0919:57 SSR 346.79/012.68/13425/132
0920:05 SSR 348.05/013.39/13727/135
0920:12 SSR 349.19/014.11/14025/138
0920:19 SSR 350.27/014.85/14327/141
0920:26 SSR 351.26/015.59/14727/145
0920:34 SSR 352.18/016.36/14924/147
0920:41 SSR 353.07/017.12/15124/149
0920:48 SSR 353.90/017.91/15226/150
0920:55 SSR 354.67/018.71/15226/150
0921:02 SSR 355.39/019.56/15226/150
0921:10 SSR 356.08/020.42/15226/150
0921:17 SSR 356.73/021.30/15226/150
0921:24 SSR 357.34/022.21/15226/150
0921:31 SSR 357.93/023.14/15226/150
0921:38 SSR 358.47/024.07/15226/150
0921:46 SSR 358.96/025.01/15226/150
0921:53 SSR 359.43/025.98/15324/151
0922:00 SSR 359.88/026.93/15826/156
0922:07 SSR 000.25/027.89/16325/161
0922:15 SSR 000.62/028.81/16925/167
END MISSION 0901
TS BH1 T1 5502590N 00233250W 00945 20 A202
TS BH5 SA8 5503073N 00233109W 00932 10 R208
TS R81 IR 5502069N 00234435W 00801 10 P100
TS BC JETS5503007N 00221261W 01417 10 P208
TS BL JETS5507552N 00229094W 01460 20 P208
TS BK T43 5504028N 00234168W 01112 40 A206

PMR5

MOD/0/29A



